

Gumball / Candy Dispenser Machine Operating Instructions

These machines vend gum up to 1080ct size (0.925 inch), candy or nuts. It is suitable for ages 6 and older. Edible fill is not included. This is a free vend machine (no coins needed).

NOTE: do not over tighten the lock.

If the key is lost, a \$15 replacement charge will apply.

Filling the Machine:

1. Insert the key into the lock and turn counter-clockwise to unlock.
2. Remove the lock and the lid from the machine and place to the side.
3. Gently pour the product into the machine globe.
4. Place the lid back onto the machine.
5. Replace the lock onto the machine and tighten with the key.
6. **DO NOT OVER TIGHTEN LOCK.**

1" GUM	M&M PEANUT	M&M PLAIN	SKITTLES	PRESSED CANDY
350	9 LBS	10 LBS	11.25 LBS	10.25 LBS

Helpful Hints:

1. Keep machine out of direct sunlight, and away from sources of heat (like radiators, heaters, fires, etc.)
2. Keep machines dry at all times.
3. Always wash your hands and/or wear clean FDA approved gloves before handling/filling the stock.
4. Do not put a product that has fallen on the floor, or has been contaminated in any way, into the machine.
5. Do not eat, drink, or smoke when handling stock or filling the machine.